


Acadian Divider Blocks - 6" & 8"

INSTALLATION INSTRUCTIONS

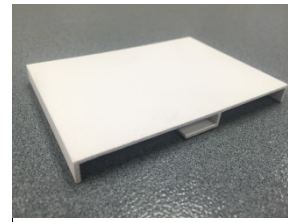


1 Set Includes: 8ea – Divider Blocks Painted Required Color.


- Step 1: Assemble columns per instructions that were provided with the columns.
- Step 2: With the column installed, locate the desired position at the top and bottom of the column for the divider blocks to be installed. A light mark with a pencil would be adequate. (See figure 1 below)
- Step 3: Place a small amount of construction adhesive on the back side of the divider block on the center tab only. Insert divider block into position at the desired location previously marked in step 2 and press into place to distribute the adhesive and secure. (See figure 2 below)
- Step 4: Place a piece of masking tape or "painters tape" across each of the divider blocks to hold in place until adhesive sets. Tape can be removed once adequate time has allowed for adhesive to cure. (See figure 3 below)



(Figure 1)

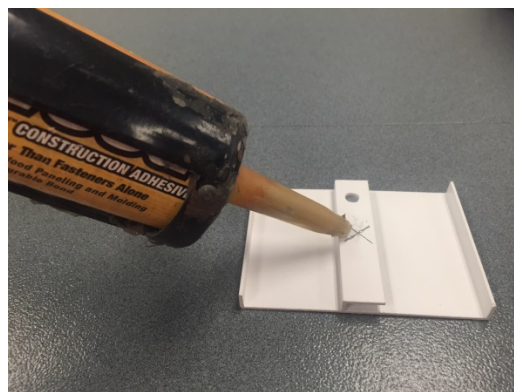

(Figure 2)

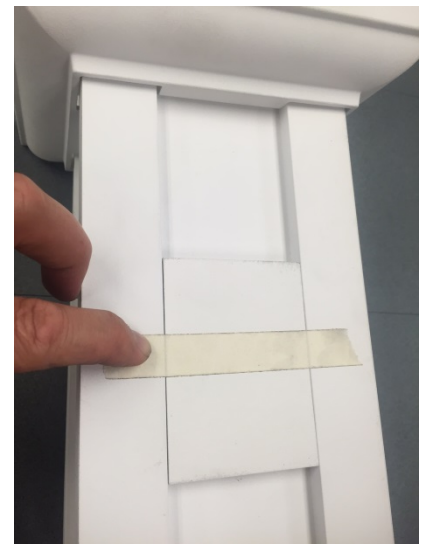

(Figure 3)

AFCO Form AL14 - Rev. 7/19/16

For more information, contact Customer Service at 1-800-599-9912 or visit our website at www.afco-ind.com.