CELLULAR PVC BUNGALOW COLUMN WRAPS W/TRIM **INSTALLATION INSTRUCTIONS (NON-LOAD BEARING)**



- Wraps are designed to be used only to cover an existing structural support.
- AFCO offers products for structural support. Please contact AFCO Customer Service for more information.
- Column Wrap Kit contains four (4) column panels and four (4) tapered base trim pieces.



1. Measure the overall opening where the column wrap is to be used. ______



2. Trim the bottom of the column wrap panels to the required length.



3. (a) Apply a thin bead of FRP adhesive to the female side of the miter lock joint. .




4. Place 3 sided wrap around structural support.




angles along the miter lock edges.

(b) Join 3 of the column wrap panels at 90°

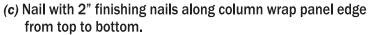




- 5. Attach a pressure treated 2 x 4 at the space between the inside of the wrap and the structural support.
- 6. (a) Apply adhesive to remaining column panel and carefully fit panel to join the first 3 panels.

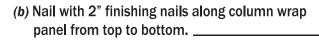



- 7. - Anchor the bottom of the column wrap to the previously installed 2 x 4's with 2" finishing nails.
 - Anchor a minimum of 2 opposing panels.
- To anchor top of column, toenail 3" finishing nails through top trim and column into header. 8.
- 9. Install tapered base trim with smaller side up. Apply FRP adhesive and nail with 2" finishing nails to column wrap. ____

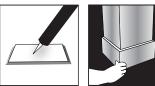

- **10**. Caulk mitered edges, nail holes, cap/base and gaps with white caulk.
- **11**. Sand lightly before painting; use 100% acrylic exterior latex paint that has a LRV of 55% or higher.
- Note: If attaching Redi-Rail system to column wrap, attach blocks to the structural support prior to step 4 where the rail will be attached at the top & bottom. Column wrap is not designed to support rail alone. Rail must attach to structural support.
- For additional information contact Customer Service at 1-800-599-9912 or visit our website at www.afco-ind.com